

Einstellung Unicable / Set Unicable > LNB TYP **SaTCR**



Set Filter Value > OK Taste/button



Wähle Gerät/ Choose Device



Folgende möglich / Following possible:

INVERTO Unicable-Twin und Unicable- Quad LNB + ETRONIX Unicable- LNBs (+ andere baugleiche):

ID1 / IF-Channel 1 (SCR0): 1680 MHz

ID2 / IF-Channel 2 (SCR1): 1420 MHz

ID3 / IF-Channel 3 (SCR2): 2040 MHz

ID4 / IF-Channel 4 (SCR3): 1210 MHz

DUR-LINE Unicable- LNBs + Inverto Black Unicable-Quad LNB mit 2x Legacy:

ID1 / IF-Channel 1 (SCR0): 1210 MHz

ID2 / IF-Channel 2 (SCR1): 1420 MHz

ID3 / IF-Channel 3 (SCR2): 1680 MHz

ID4 / IF-Channel 4 (SCR3): 2040 MHz

DUR-LINE (z.B. VDU- Baureihe), JULTEC, AXING Unicable- Einkabelsystem:

ID1 (SCR0): 1280 MHz

ID2 (SCR1): 1382 MHz

ID3 (SCR2): 1484 MHz

ID4 (SCR3): 1586 MHz

ID5 (SCR4): 1688 MHz

ID6 (SCR5): 1790 MHz

ID7 (SCR6): 1892 MHz

ID8 (SCR7): 1994 MHz

DUR-LINE (z.B. UCP18), DCT-DELTA, TECHNISAT, SMART Unicable- Einkabelsysteme:

ID1 (SCR0): 1284 MHz

ID2 (SCR1): 1400 MHz

ID3 (SCR2): 1516 MHz

ID4 (SCR3): 1632 MHz

ID5 (SCR4): 1748 MHz

ID6 (SCR5): 1864 MHz

ID7 (SCR6): 1980 MHz

ID8 (SCR7): 2096 MHz

INVERTO Unicable- Multischalter (z.B. IDLP-UST110-CU010-BPP):

ID1 (SCR0): 1076 MHz

ID2 (SCR1): 1178 MHz

ID3 (SCR2): 1280 MHz

ID4 (SCR3): 1382 MHz

ID5 (SCR4): 1484 MHz

ID6 (SCR5): 1586 MHz

ID7 (SCR6): 1688 MHz

ID8 (SCR7): 1790 MHz

SKYTRONIC/ PREISNER, WISI Unicable- Einkabelsystem:

ID1 (SCR0): 1178 MHz

ID2 (SCR1): 1280 MHz

ID3 (SCR2): 1382 MHz

ID4 (SCR3): 1484 MHz

ID5 (SCR4): 1586 MHz

ID6 (SCR5): 1688 MHz

ID7 (SCR6): 1790 MHz

ID8 (SCR7): 1892 MHz

KATHREIN Unicable- Einkabelsysteme: UAS481 + EXR 501 / 551 / 552

ID1 (SCR0): 1400 MHz

ID2 (SCR1): 1516 MHz

ID3 (SCR2): 1632 MHz

ID4 (SCR3): 1748 MHz

KATHREIN Unicable- Einkabelsysteme: EXR 1542 / 2542 / 1942 / 2942

ID1 (SCR0): 1284 MHz

ID2 (SCR1): 1400 MHz

ID3 (SCR2): 1516 MHz

ID4 (SCR3): 1632 MHz

KATHREIN Unicable- Einkabelsysteme: EXR 1581 / 2581 + EXU 908

ID1 (SCR0): 1284 MHz

ID2 (SCR1): 1400 MHz

ID3 (SCR2): 1516 MHz

ID4 (SCR3): 1632 MHz

ID5 (SCR4): 1748 MHz

ID6 (SCR5): 1864 MHz


ID7 (SCR6): 1980 MHz

ID8 (SCR7): 2096 MHz


FTE Unicable- Einkabelsysteme:

ID1 (SCR0): 1400 MHz
ID2 (SCR1): 1632 MHz
ID3 (SCR2): 1284 MHz
ID4 (SCR3): 1516 MHz
ID5 (SCR4): 1864 MHz
ID6 (SCR5): 2096 MHz
ID7 (SCR6): 1748 MHz
ID8 (SCR7): 1980 MHz

Wähle/Choose SaTCR Index > Frequenz/Frequency

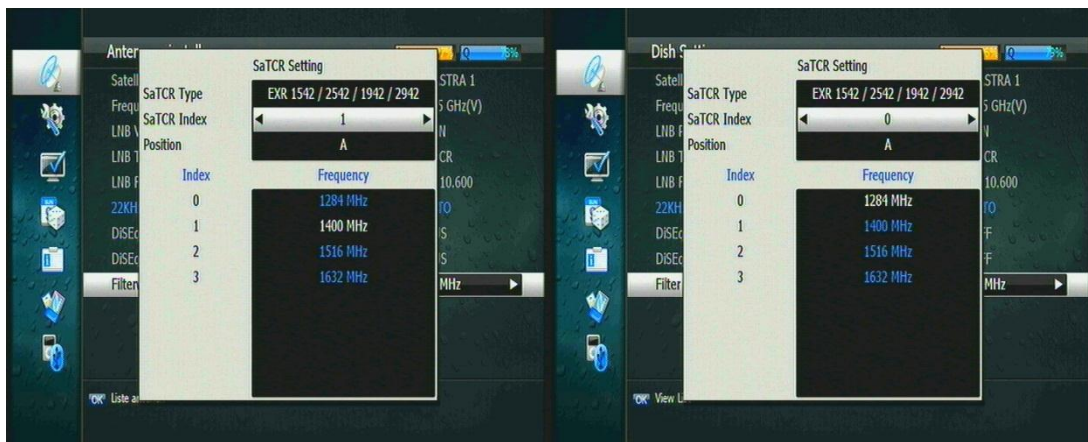

Wähle/Choose SAT Position z.B. A > Astra1 + B > Hotbird

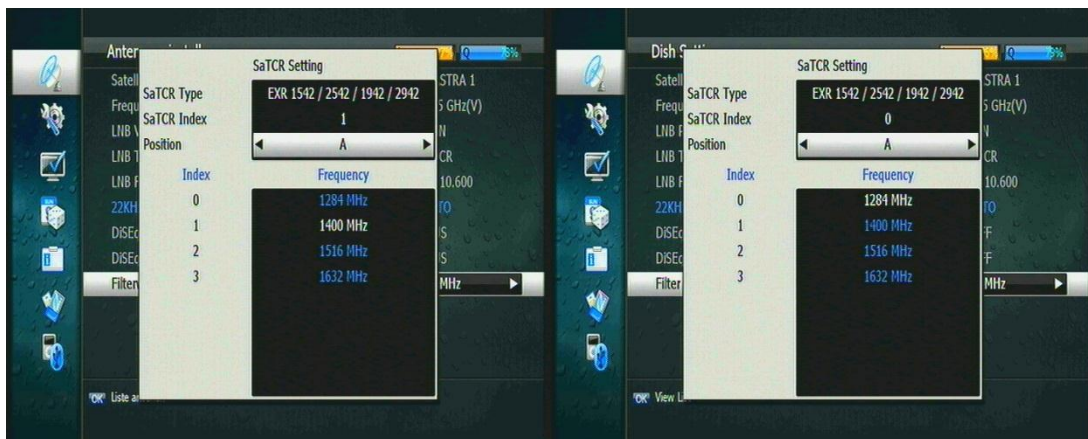

Nach der Auswahl mit EXIT Taste Menü verlassen und mit JA die Änderung bestätigen !

After set parameter. EXIT key to leave menu and confirm with YES !