



CX-Flower Extern IP-Box

Operation and setup

1. Main Menu->Mute+999 Enable patch
2. Exit all menu,Info+9 to Select "NewCS ECM", Connect the RS232 cable (PIN2→PIN3, PIN3→PIN2,PIN5→PIN5) with STB and IP-BOX, the same cable for updating.

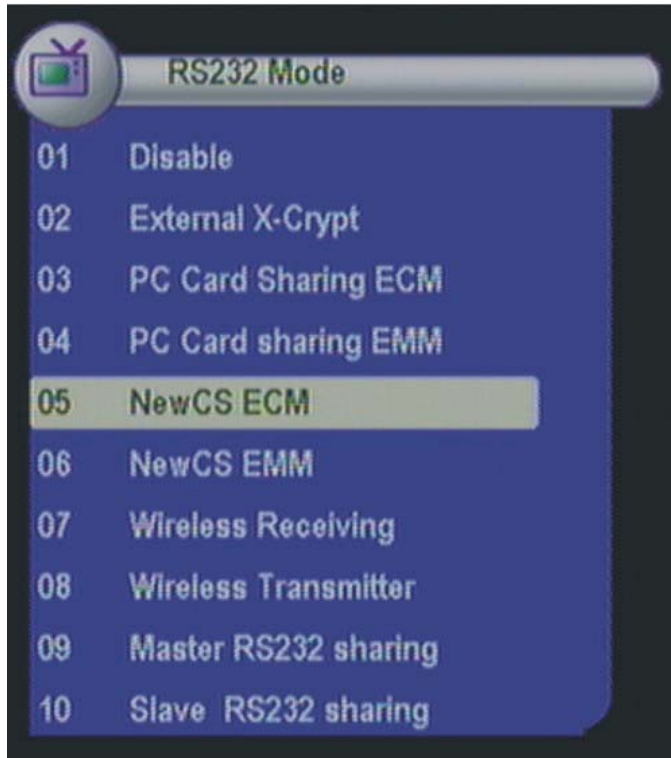

3. Go to Main Menu→Service Organizing→IP-Box Setting->Network Setting

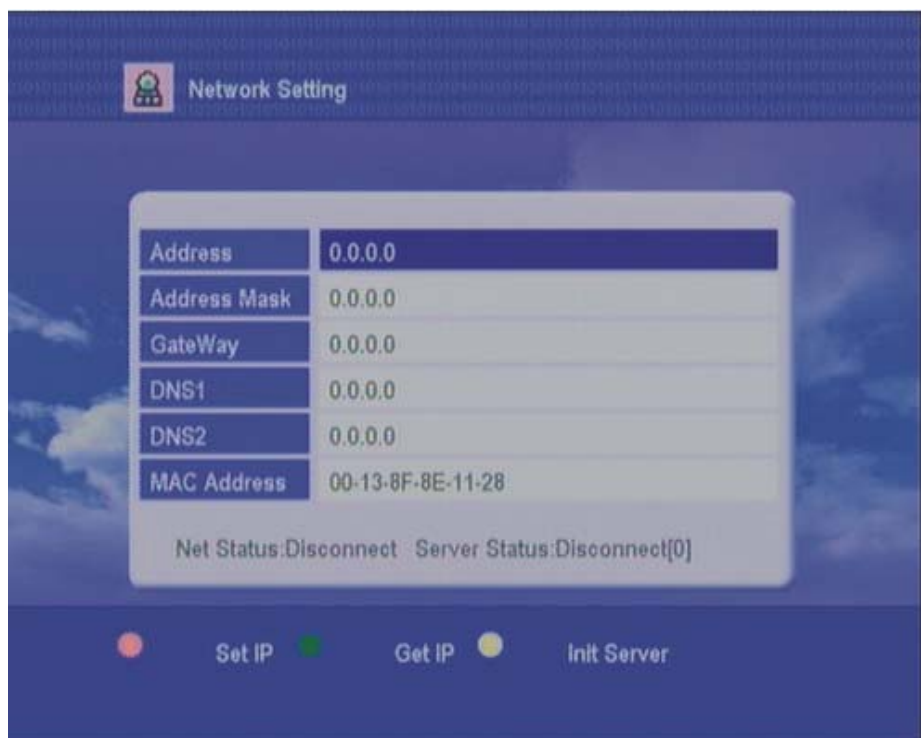

Here to config the IP-BOX Address, mask etc...

If you want to auto config the IP-BOX, do the following:

- 1) Switch off IP-BOX power.
- 2) Factory Default STB.
- 3) Switch on the IP-BOX.

4. Go to Main Menu→Service Organizing→IP-Box Setting->Server Setting

IP/URL	ipboxtest.5166.info
TCP Port	10110
DES Key	0102030405060708091011121314
User Name	dummy
Password	dummy
Disconnect	

[Delete](#) [Init Server](#)

In this menu, you can input your server, the MAX server can support 5 servers.